
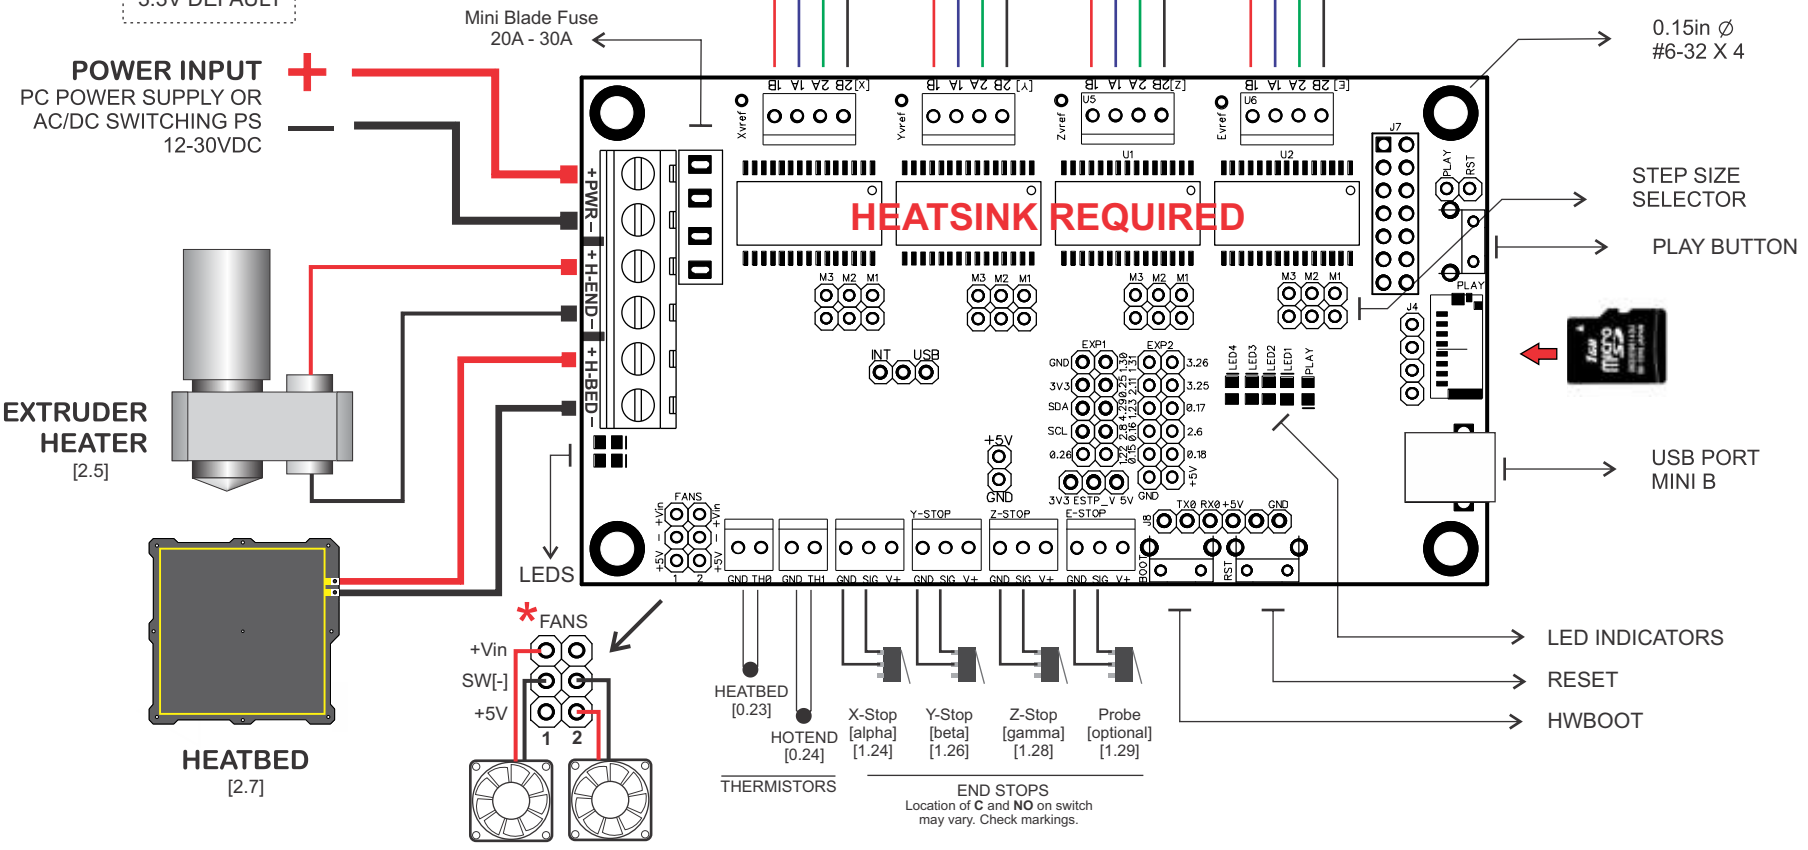
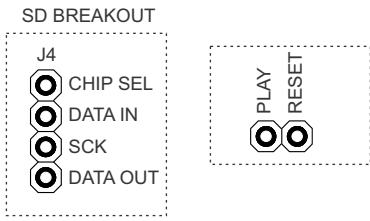
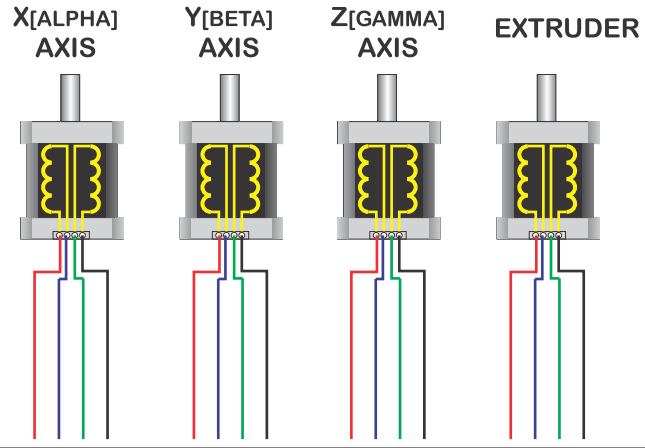


AZTEEG X5 MINI V2.0 4-AXIS MOTION CONTROLLER WIRING DIAGRAM

STEPPER MOTORS

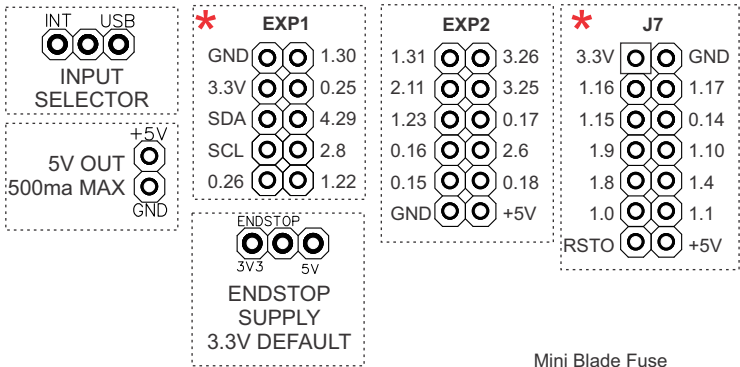

NOTES:
* NEW OR CHANGED FROM v1.1

LOW POWER FANS ONLY

Micro-stepping jumper settings

OFF = NO JUMPER

	Ĉ	1/2	1/4	1/8	1/16	1/32	1/64	1/128
M1	ON	OFF	ON	OFF	ON	OFF	ON	OFF
M2	ON	ON	OFF	OFF	ON	ON	OFF	OFF
M3	ON	ON	ON	ON	OFF	OFF	OFF	OFF


Hardware: V2.0
Document: V1.0



*** Sync Drivers**

Extruder driver can be slaved with Y driver by shorting J1, J2 and J3 at bottom side of board. For Dual Y motor CNC applications.

Edit config file before shorting jumpers, see guide for details.

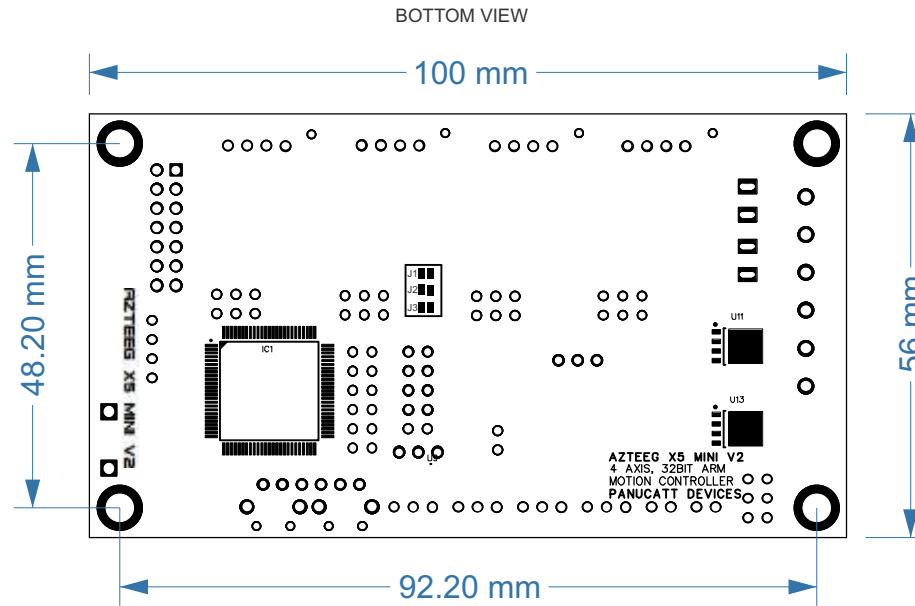

NOTES:

* NEW OR CHANGED FROM v1.1

Hardware: V2.0
Document: V1.0